


# **Mobile App User Manual**

# **Content**

1. Login to Your Mobile App	03
2. Asset Live Location and Update Information (Live Assets)	04
3. Asset Live Location and Update Information (Protect Assets)	05
4. Setting Alarm Notifications — Individual Assets (Live Assets)	06
5. Setting Alarm Notifications — Individual Assets (Protect / Loc8 Assets)	07
6. Setting Alarm Notifications — Multiple Assets	08
7. Completing a Playback (Only Live Assets)	09
8. Setting Geofence (Only Live Assets)	10
9. Create Report (Only Live Assets)	11
10. Adding Contacts To The Contact List	12
11. Recharging Credits	13
12. Upgrade To Live (Protect and Loc8 Assets)	14
13. Change Password	15
14. Viewing Recent Alarms (Only Live Assets)	16
15. Shared Assets	17
16. Share Tracking Link	18
17. Purchase Fuel Report	19
18. CCTV player	20
19. Enabling Geolock/Push update functions (Live Assets)	21
20. Enabling Geolock functions (Protect and Loc8 Assets)	22


# **Login to Your Mobile App**

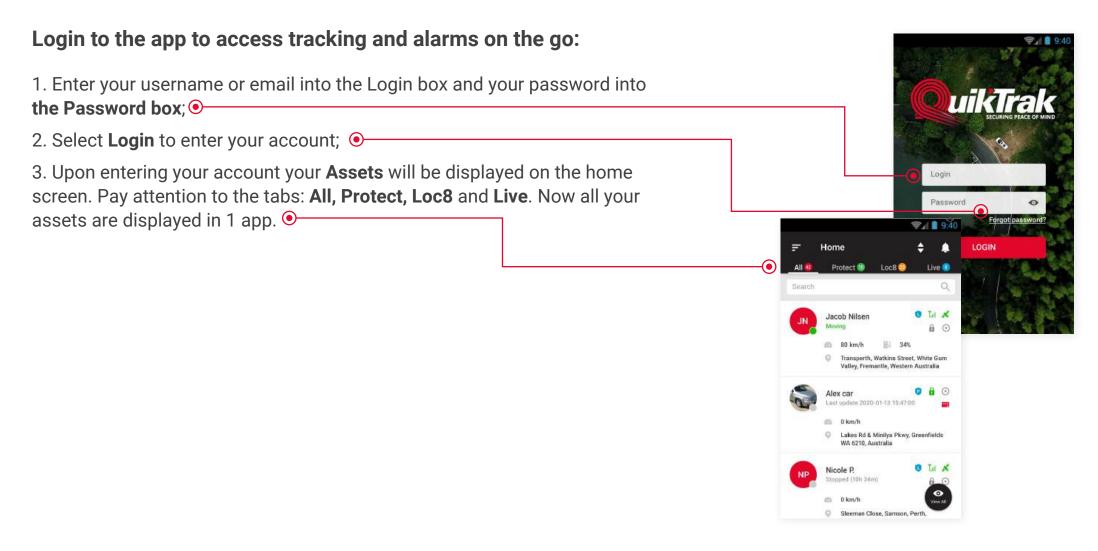

#### Hint:

We strongly recommend you modify the default password for maximum account security.

# **Asset Live Location and Update Information (Live Assets)**

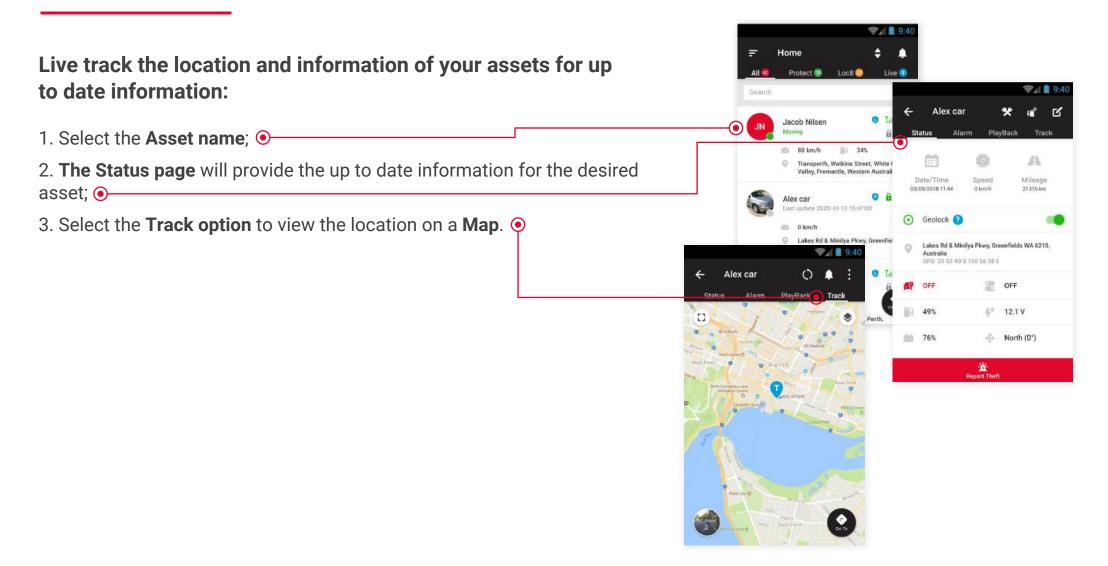

#### Hint:

**Need directions?** Click on the GO TO option on the tracking page to access your mapping software.


# **Asset Live Location and Update Information (Protect Assets)**

access your mapping software.


Live track the location and information of your assets for up to date information: Alex car 1. Select the **Asset name**; •-Transperth, Watkins Street, White Gum 2. On the **Screen that opens**, you can select the desired option; • 3. The Status page will provide the up to date information for the desired Last update 2020-01-13 15:47:00 Status asset; •-Position Lakes Rd & Minilya Pkwy, Greenfields WA 6210, Australia 4. Select **the Position** option to view the location on a **Map**. • Geolock Date/Time 26/05/2018 11:44 197 Adelaide Terrace, East Perth WA 6004, Aust 12 (V) () UPDATE Hint: Need directions? Click on the GO TO option on the tracking page to

05

# **Setting Alarm Notifications — Individual Assets (Live Assets)**

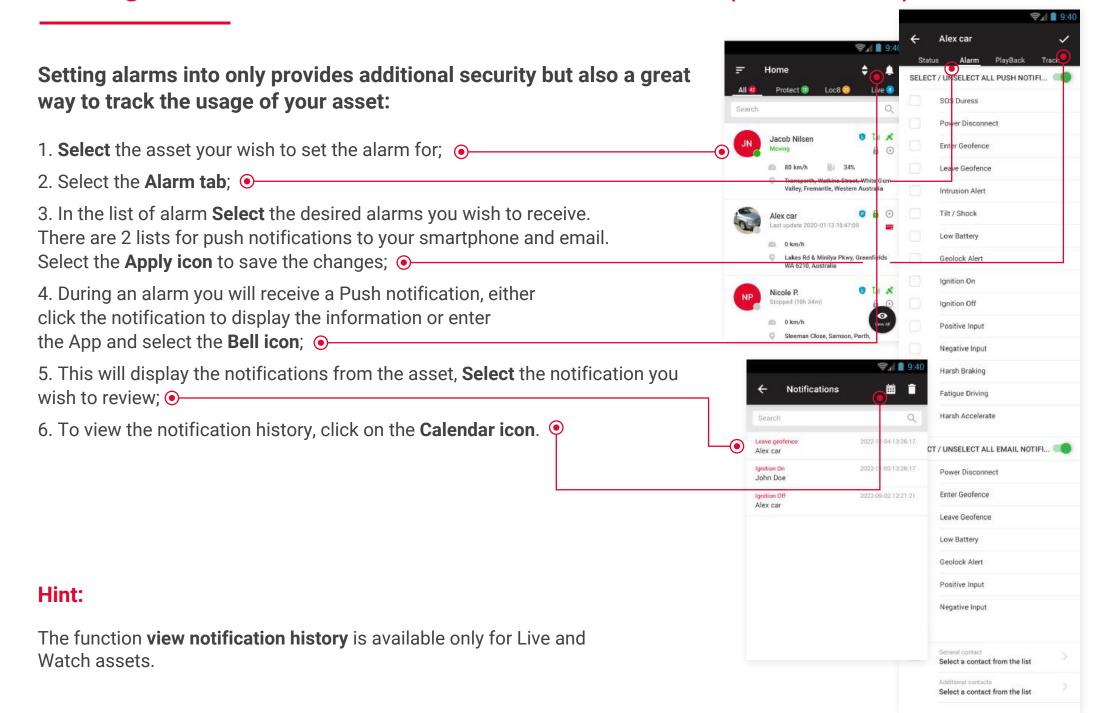

# Setting Alarm Notifications — Individual Assets (Protect / Loc8 Assets)

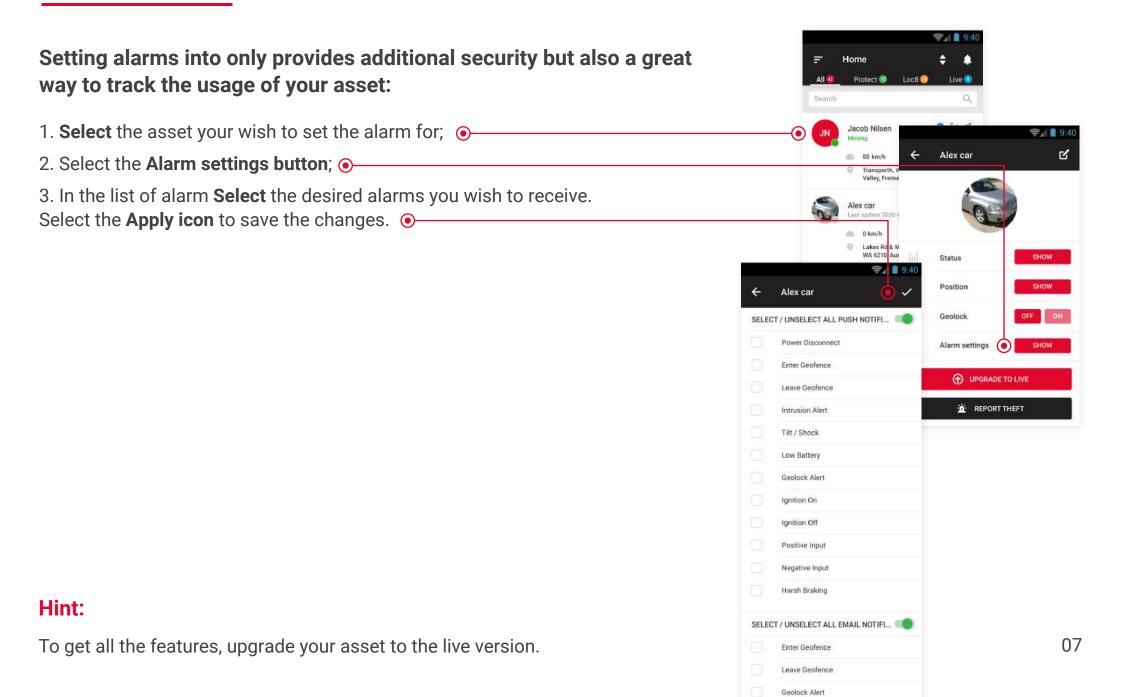

# **Setting Alarm Notifications — Multiple Assets**

#### Setting alarms for a fleet has never been easier:


- 1. Select the **Menu icon**; •-
- 2. Select the Alarms tab; •
- 3. Select the **Categor**y (Protect, Loc8, Live) and **Assets** you wish for the alarm to apply to;
- 4. Select the **Tick** to move forward; •
- 5. Select the **Applicable alarms**; •
- 6. Select the **Tick** to Save the alarms. •

#### Hint:

**Not receiving audible and visual alarm notifications?** Check the bellow settings:

- Alarms are selected and turned on
- Your settings permissions for the app are turned on –
  this includes banners, storage and sound notifications
- Your mobile data is active.

Want to see your alarm log? Select the BELL icon in the top right hand corner to view all of the saved alarms. Please note if you "swipe" the alarm off the notification screen it will not save.

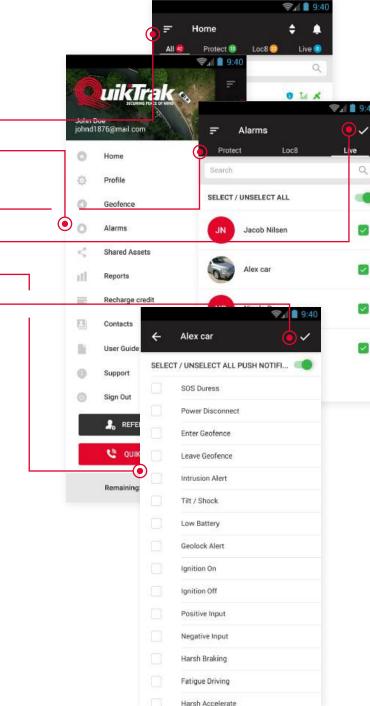

# Completing a Playback (Only Live Assets)


The Playback will show you the assets route, speeds, stops and statistical information:

- 1. Select the asset for which you want to view the Playback; •
- 2. Select the Playback tab; •
- 3. Set the **Start** and **End date** and times; Click the **Apply icon**; •
- 4. The recorded route will display on a **Map**. This will allow you to **Toggle** the desired time and and playback speed; •

#### Hint:

In the tabs: **Summary, Trips** and **Activity** you can view more detailed information about trips and events.

The longer the playback the more time it may take to download the data. Access up to 30 days of playback data in one report on the **WEBSITE** login.

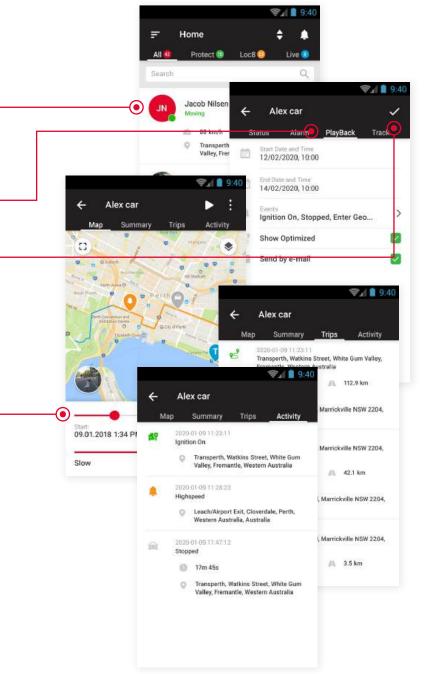


# **Setting Geofence (Only Live Assets)**

Geofences are a great way to log and receive notifications when an asset enters or leaves a designated area:


- 1. On the Menu screen, select **Geofence**; •
- 2. In the screen that appears, select the **Plus (create) icon**; •
- 3. The Geofence will display on a Map. Add the **Necessary** information and set the geofence **Radius**. •

#### Hint:


Want to quickly secure a GEOFENCE around your assets current position? Click the GEOLOCK option on the assets STATUS page.

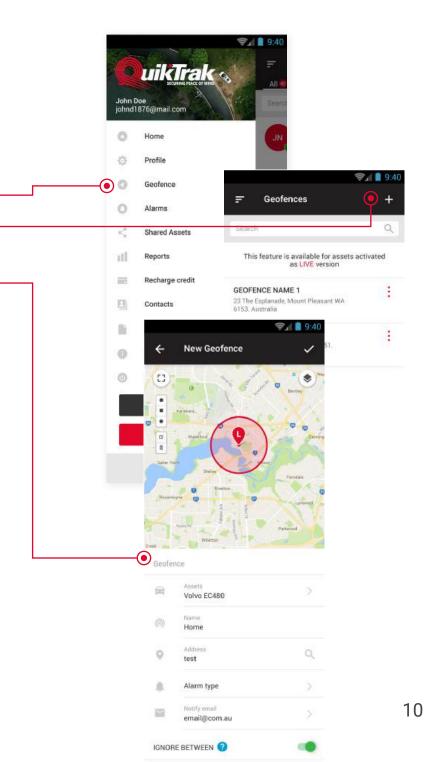

# **Create Report (Only Live Assets)**

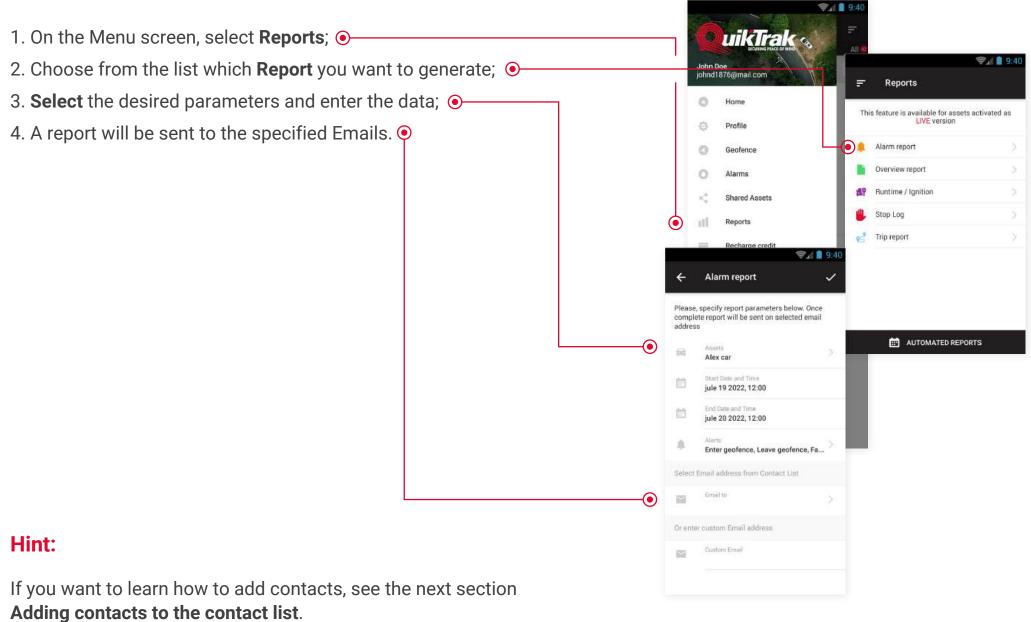


# **Adding Contacts To The Contact List**

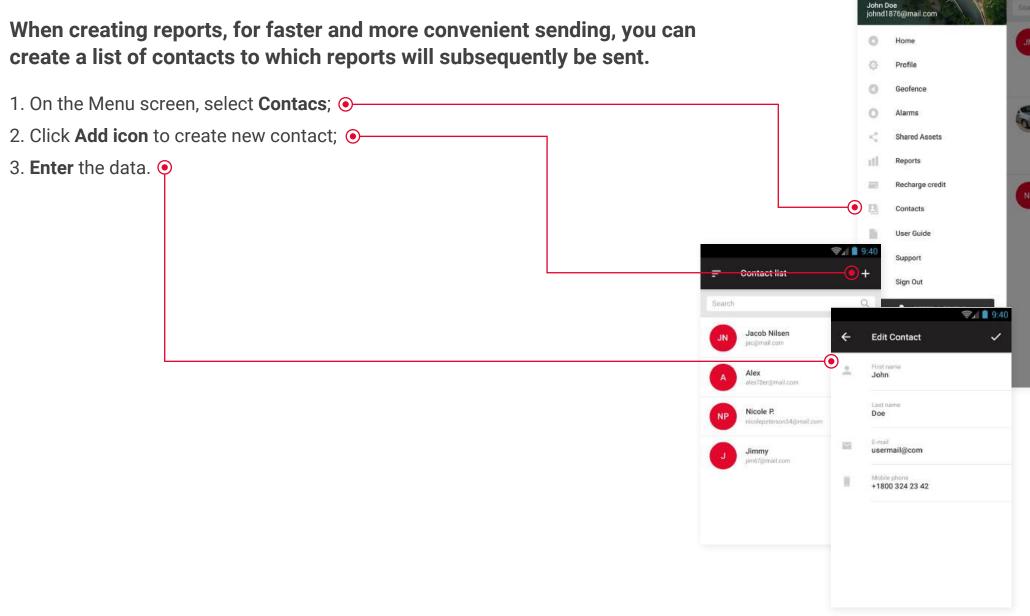


**uikTrak** 🔊


# **Recharging Credits**

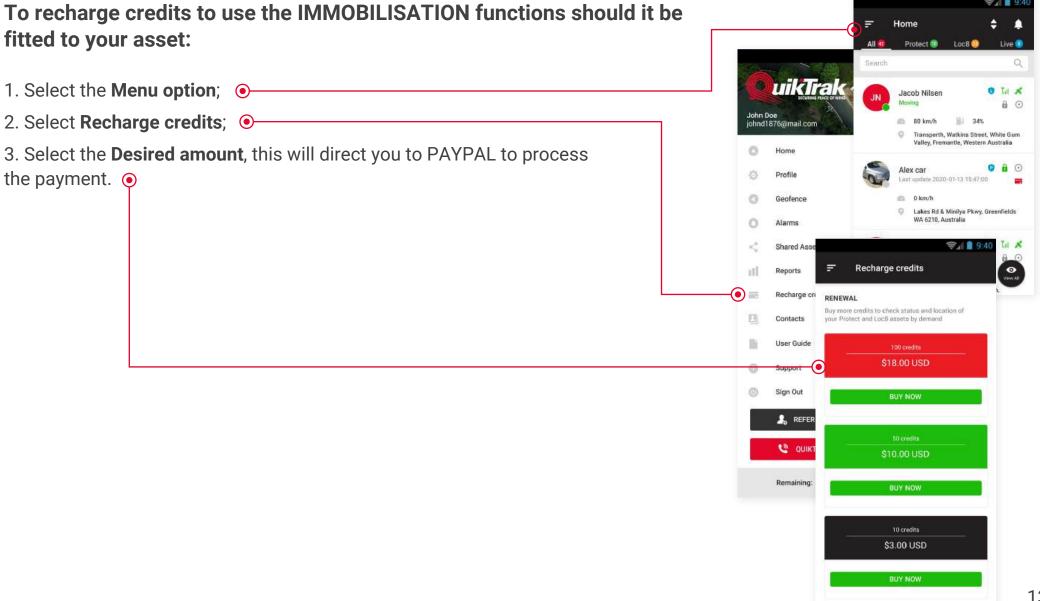


# **Upgrade To Live (Protect and Loc8 Assets)**

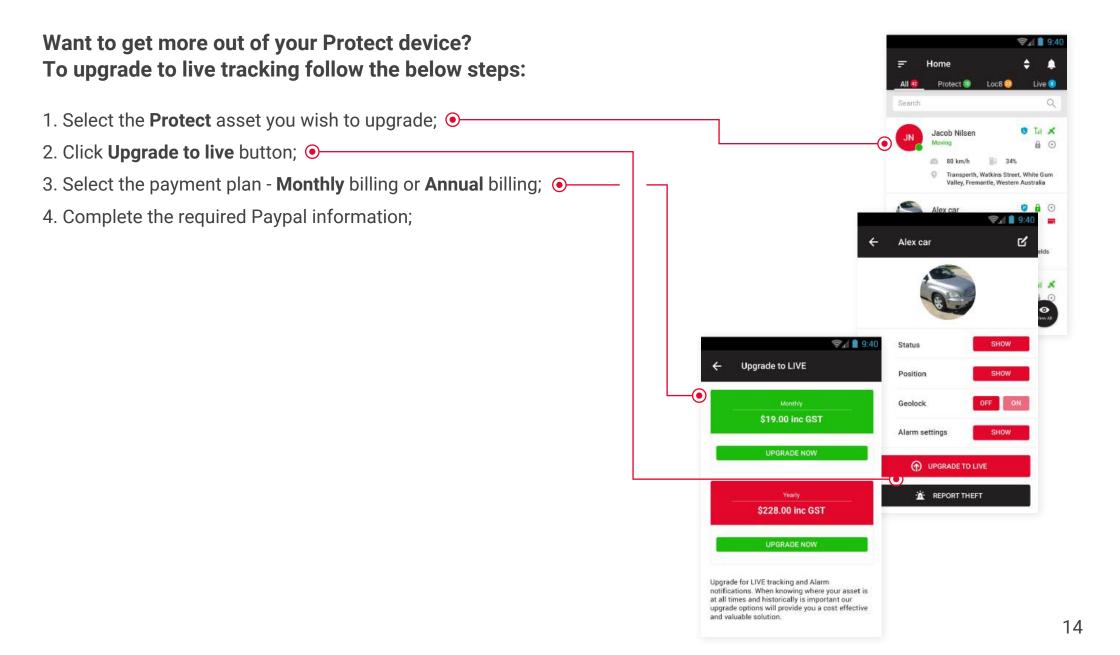


# **Change Password**

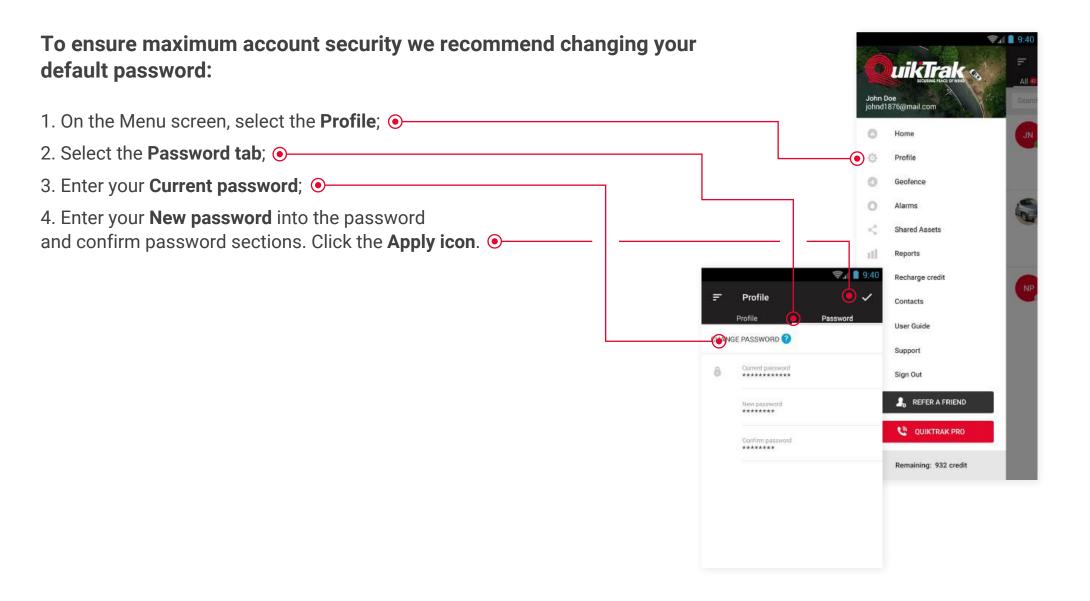


# **Viewing Recent Alarms (Only Live Assets)**

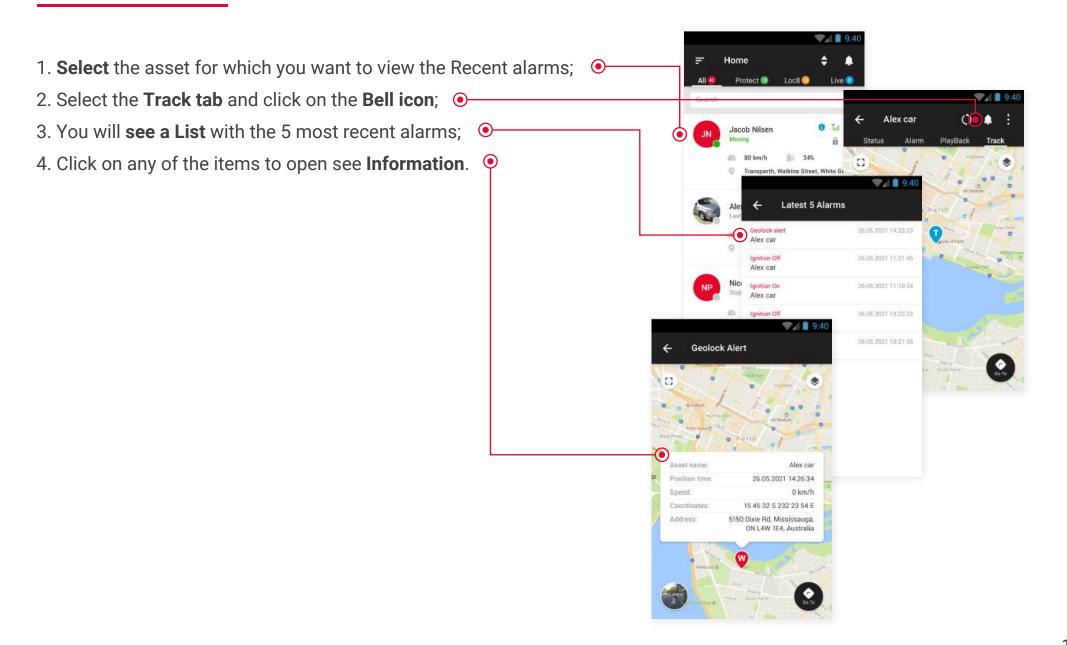


### **Shared Assets**

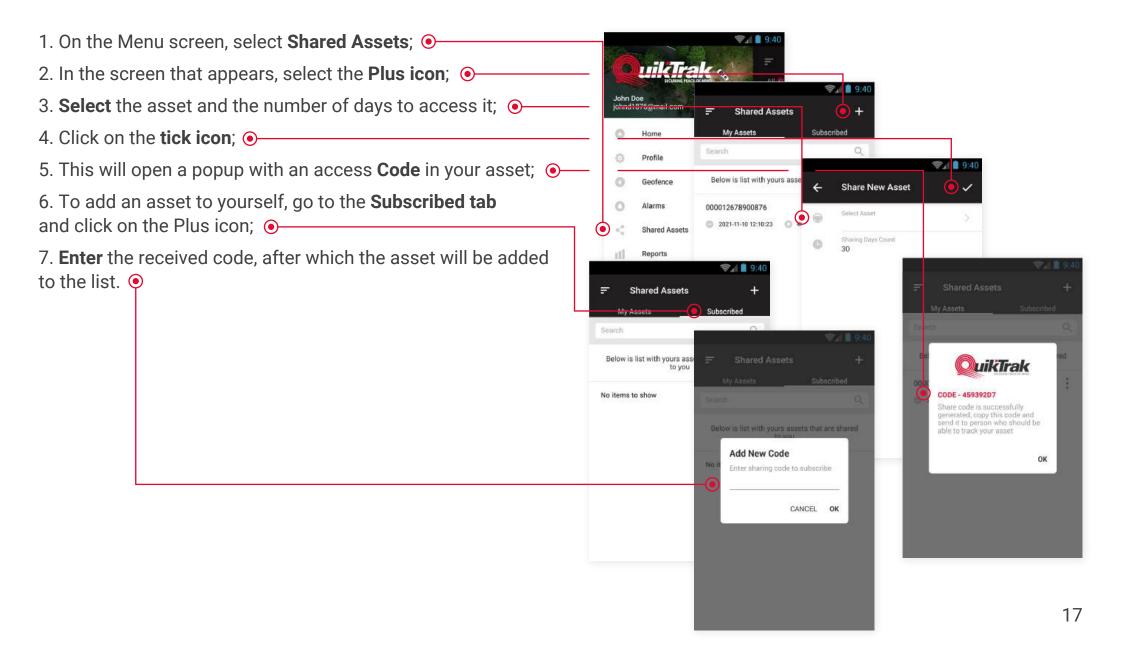


# **Share Tracking Link**

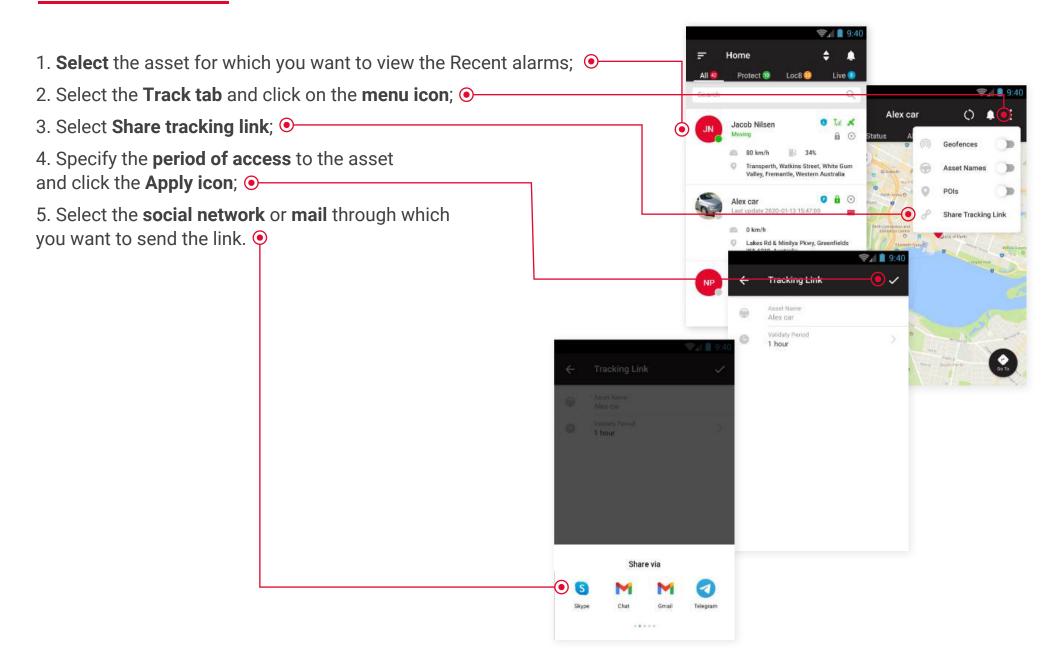

### **Purchase Fuel Report**

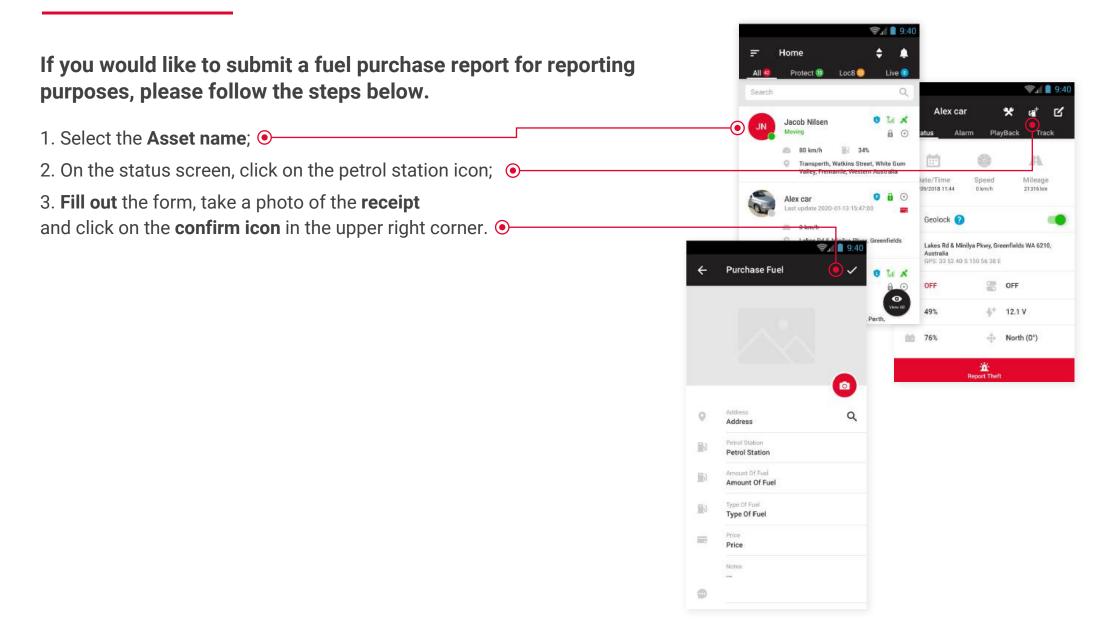


# **CCTV Player**

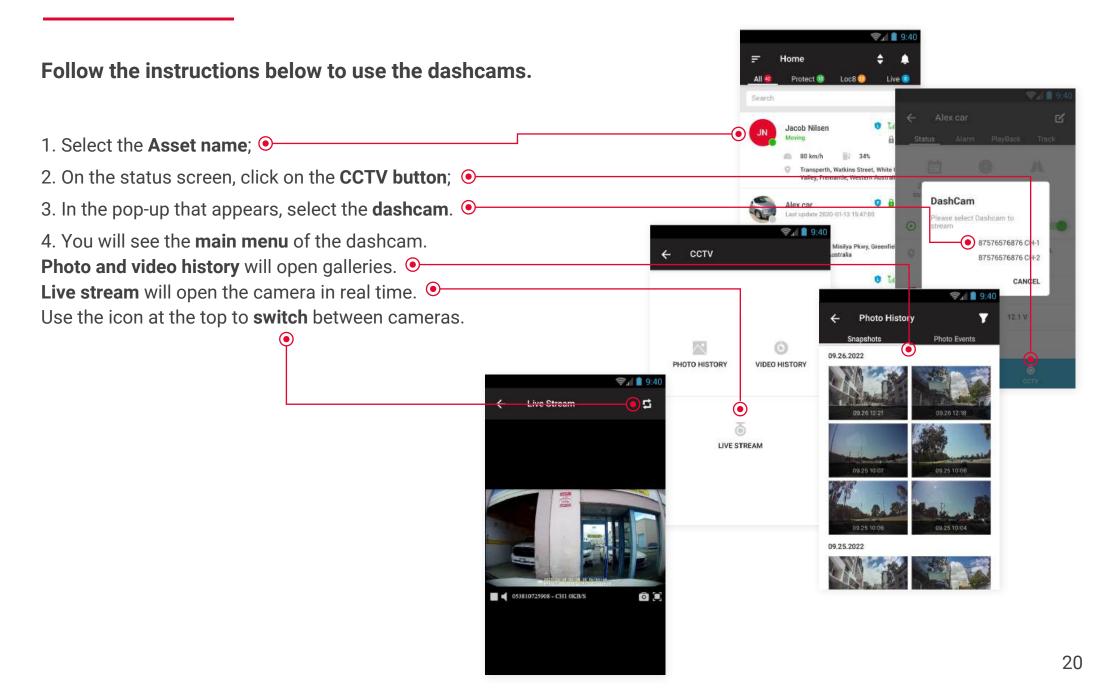

# **Enabling Geolock/Push update functions (Live Assets)**

Geolock - is a function that, when enabled, will allow you to receive a push notification if your asset starts moving.

Push update - is a function that, when enabled, will allow you to receive a push notification every time your location is updated.

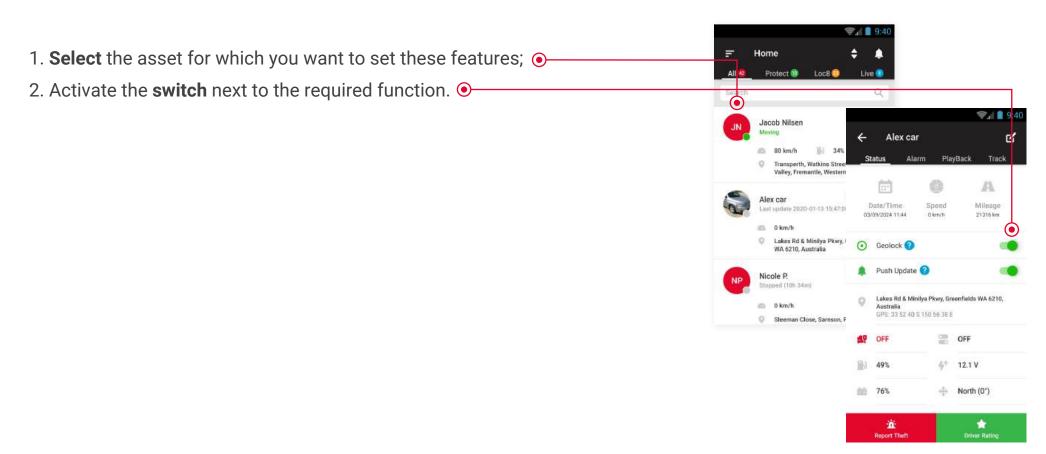

# **Enabling Geolock functions (Protect and Loc8 Assets)**

Geolock needs to be set at the location and left on until you leave the location to get the notification.

